


Instruction Manual


Ecozinc

1 - Verification of the ECOZINC kit

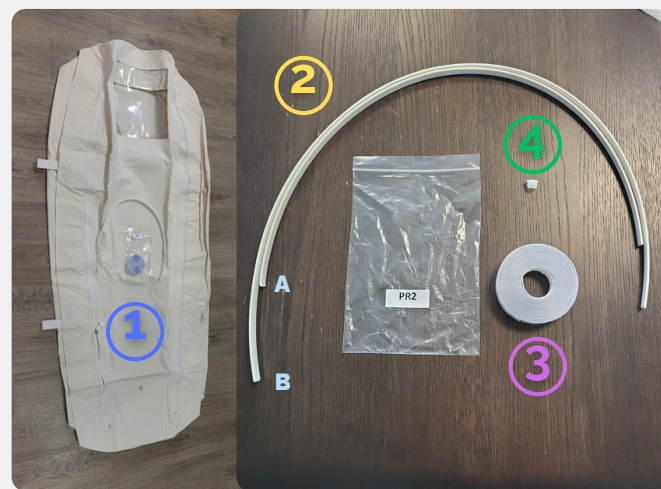

- Kit content:
- 1 ECOZINC bodybag ①
 - 2 Hoops ②
 - 1 Velcro strip ③
 - 1 Purifier cap ④

2 - Applying the self-adhesive tape

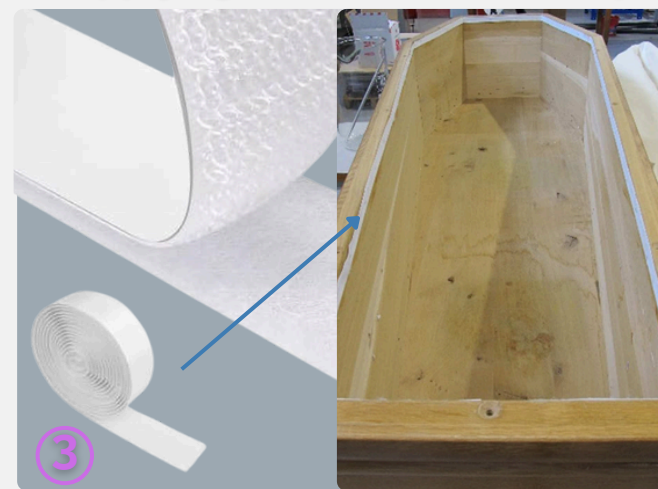

Remove the protective film from the adhesive tape and **attach** it to the upper inner edge of the coffin, wrapping it **completely around** to ensure a secure hold.

3 - Setting of the ECOZINC



Unfold and open the bag, and carefully **place** it at the bottom of the coffin.

4 - Placing the bag in the coffin




Fit the ECOZINC to the coffin, **starting at the head**. Secure the self-adhesive strips together. Once finished, **fold the edges of the bag**.

5 - Body installation




Place the body inside the cover. (Cushion optional)

6 - Placement of the small hoop

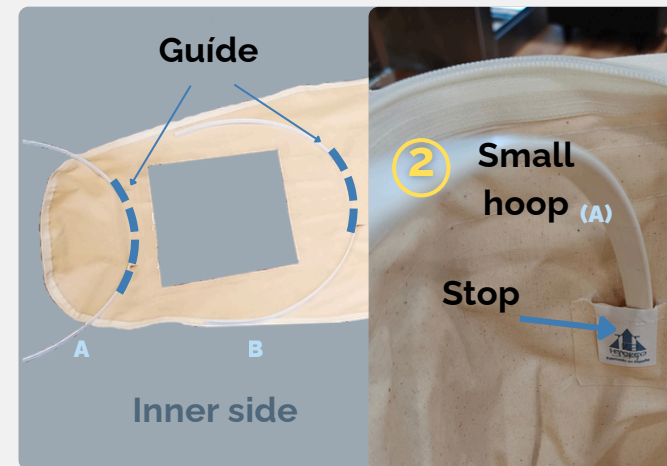

Locate the guide and **slide the small hoop (A)** inside it. Place both ends of the small hoop in the stops provided for this purpose.

7 - Placement of the large hoop

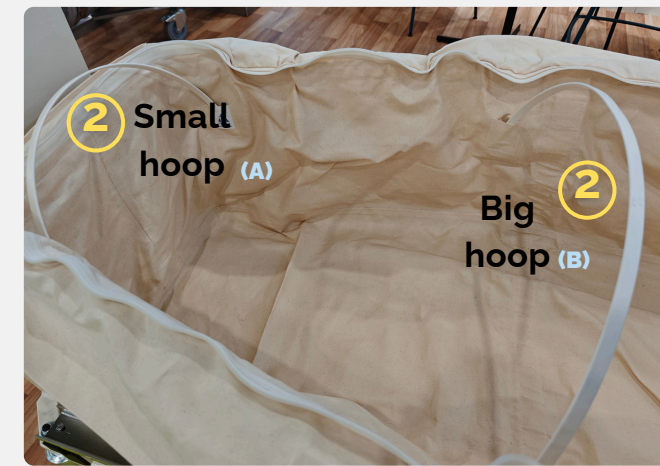


Locate the guide and slide the **large hoop (B)** inside it. Place both ends of the large ring on the stops provided for this purpose.

8 - Sealing the hole



Use the **sealing cap** (included) or screw on a **purifying filter** (optional).

9 - Purifier filter option

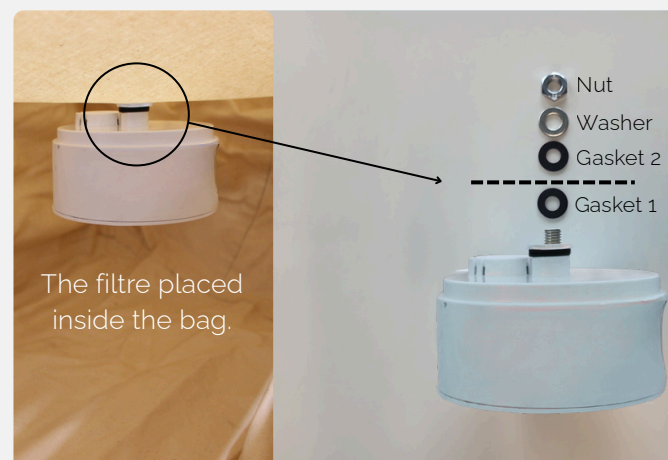

Purifying filter approved for transport that complies with civil aviation health standards.

10 - Sealing of ECOZINC



Close the bag. You may notice some **resistance** when closing it: this is **normal (airtight seal)**.

11 - Body bag ready for transport



The bag is now ready for transport.